<u> Confetti Lights / Party Lights</u>


Step 1: Select your blank and drill a 1 1/2" diameter hole to the desired depth.

Step 2: Mount a 4" x 4" waste block on a faceplate and turn a 1 1/2" diameter drive tenon. The blank should fit snugly over the drive tenon.

Step 3: Mount the drilled blank onto the drive tenon and advance the tailstock with revolving center up against the bottom of the blank to support it.

Step 4: Turn to the desired shape, then sand and finish the blank.

Step 5: The glass lamp can be glued in place using a silicone caulk to allow for wood movement.

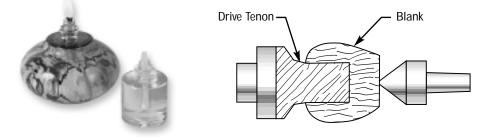

Craft Supplies USA 1-800-551-8876 www.woodturnerscatalog.com